




# Installation instructions


...continued

For Installation of Single Arm

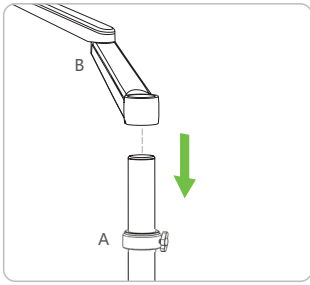


**4** Slide the retaining ring (A) onto the column, then insert the double section arm (B) onto upright column.


For Installation of Dual Arm

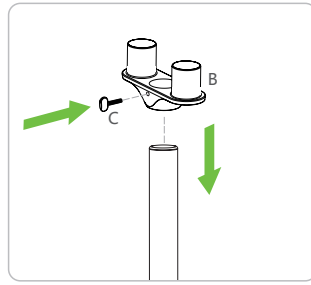

**5** Insert the dual arm connector (B) into the post. Adjust the appropriate position then tighten the screw (C).

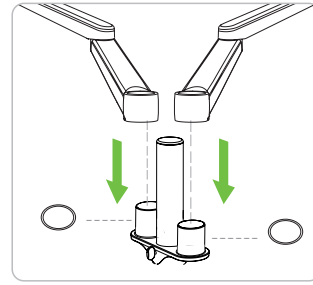

**6** Slide the nylon washers onto the dual arm connector then position both arms onto the connector.

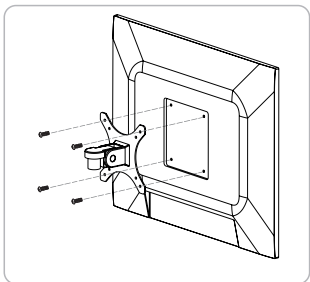


**7** Place VESA bracket in position on back of the monitor with lip facing up, attach using 4 screws provided.




**8** After positioning at desired angle tighten frame with the 6mm hex key to prevent it from dropping.



**9** Tighten frame with a 4mm hex key to prevent it from dropping.

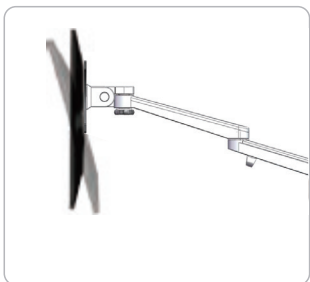


Tilt adjustment  
+90° / -80°

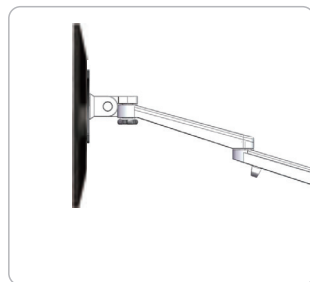

Level adjustment  
180°



Cantilever adjustment  
360°

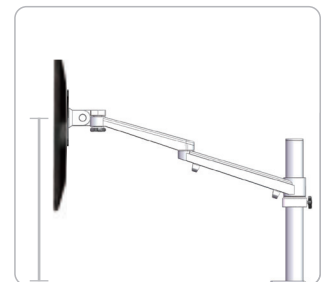

Height adjustment  
max 460mm  
max 18 inches