

5. MAINTENANCE AND DEFECTS

The table does not require any maintenance by usage as described in chapter 2 in the directions for use.


The table is only to be maintained with a wrung cloth.

In the event of the occurrence of jarring sounds during operation, STOP using the table and please contact the dealer.


6. TECHNICAL DATA

Frame, materials:	Steel, powder lacquered
Weights:	~ 57-66 lbs. (26-30 kg) depends on frame width.
W	35"-78" (89-200cm) depends on frame width.
D	23"-38" (59-100cm) , depends on top shape.
H (frame)	~21"-47" (54-119cm)
V (speed)	~1.2"/ sec. (32mm/sec.), depends on load
F_{MAX} = Max. Load on frame:	220 lbs. (100 kg)
Duty cycle:	10% by 50% of max load on frame or max 2 min. continuously
Operation:	Rocker switches
Voltage:	100-240 VAC / 50/60Hz
Standby Consumption:	< 0,5 Watt
Above specifications may vary depending on local temperature, humidity and input voltage.	

F_{MAX}


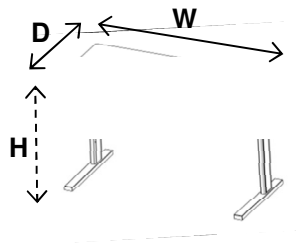


7. PARTS


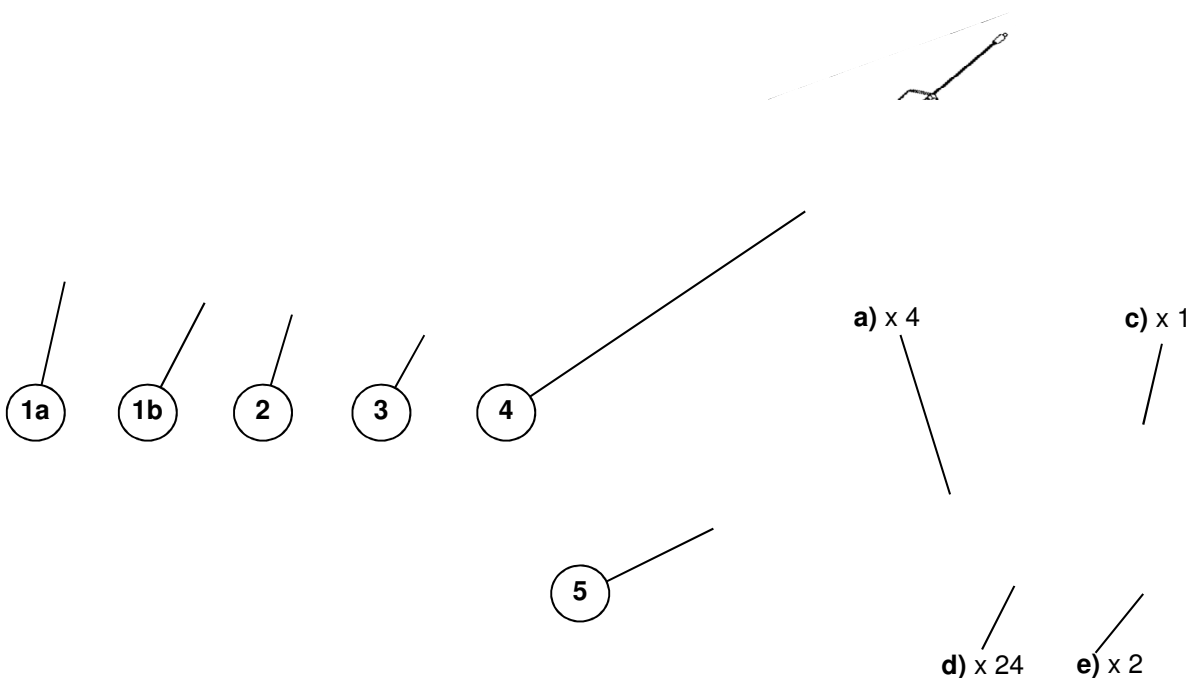


8. ASSEMBLY DIRECTIONS



1

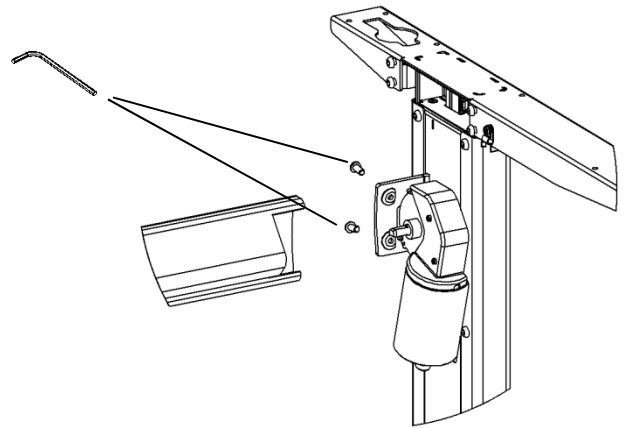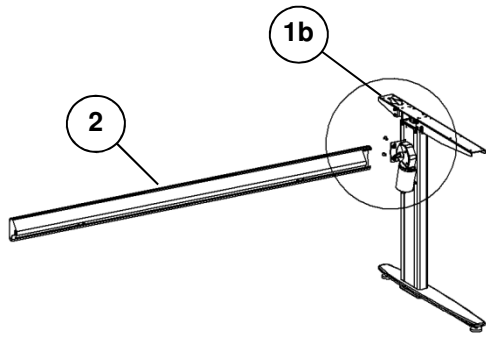

2

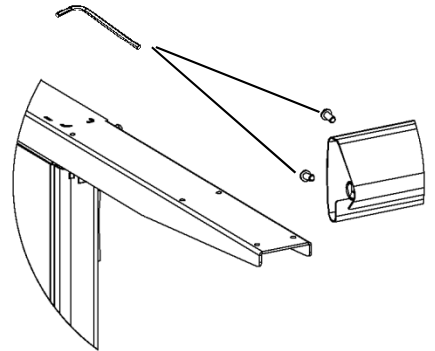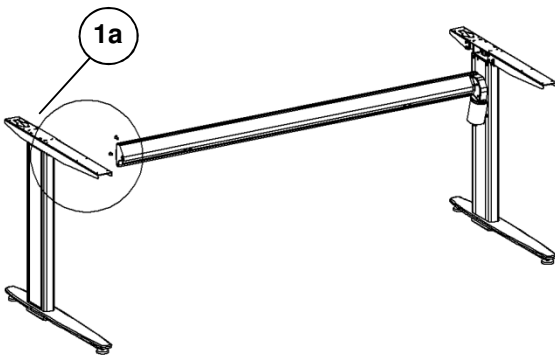


3

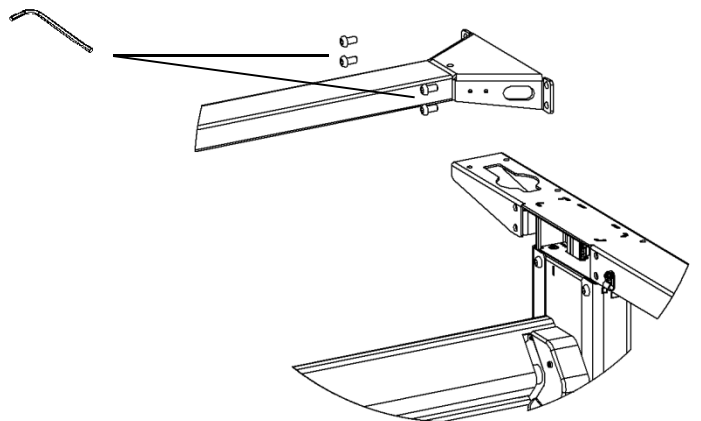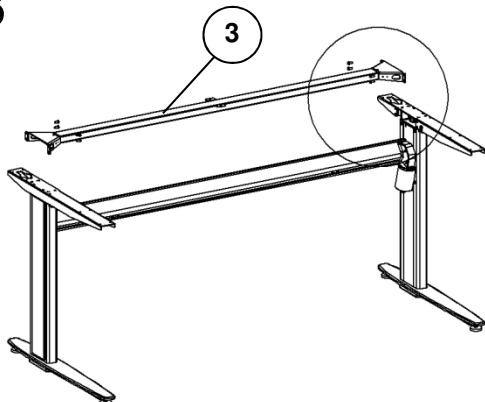




continued

continued

4

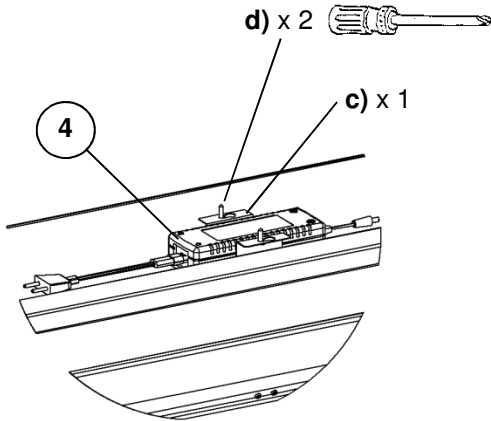

Run the wire with red plug from the control panel through these holes and connect to the power supply.

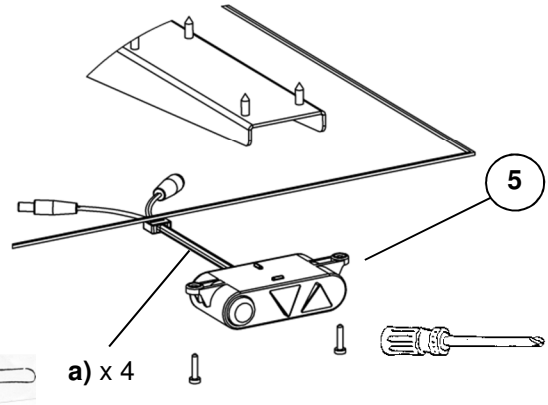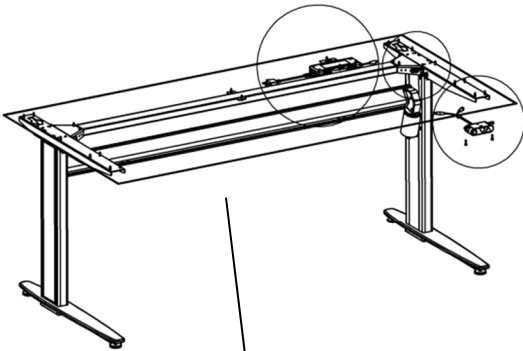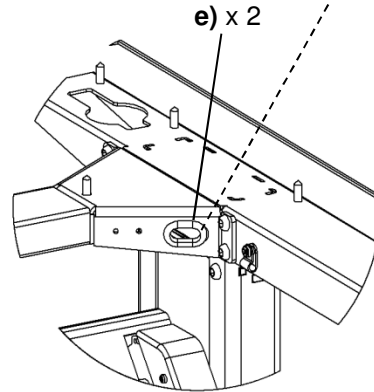

All screws **d)** need to be tightened to obtain optimal stability.

UP/DOWN operation:
Push button and UP or DOWN button must be pressed SIMULTANEOUSLY.

To ensure correct up and down operation of the desk frame it has to be fitted with a tabletop or applied a similar weight. Without a tabletop fitted, the desk frame may not operate in the downward direction.

The table is now assembled. Follow the directions for use in CHAPTER 2.

9. DECLARATION OF CONFORMITY

We hereby declare, under our sole responsibility that the following products:

- ConSet sit and stand frame product type 501-27

is in accordance with:

- Directive 2006/42/EF of The European Parliament and of the Council of 17 May 2006 on machinery and on changes of directive 95/16/EF

With reference to the above please be aware that:

- the sit and stand table is considered a machine and
- the sit and stand table may not be used until it has been assembled and installed according to the instructions

Manufacturer:

ConSet A/S
Industrivej 23
DK-6900 Skjern
Denmark
Tel: +45 9680 0080, Fax: +45 9680 0081
www.conset.com
conset@conset.com

www.PostureDepot.com



Posture Depot
179 Gasoline Alley, Ste. 203
Mooresville, NC 28117

T: 704-999-0809
E: info@posturedepot.com