

Monitor Arms

for DeskRite 100 Sit-Stand Workstation



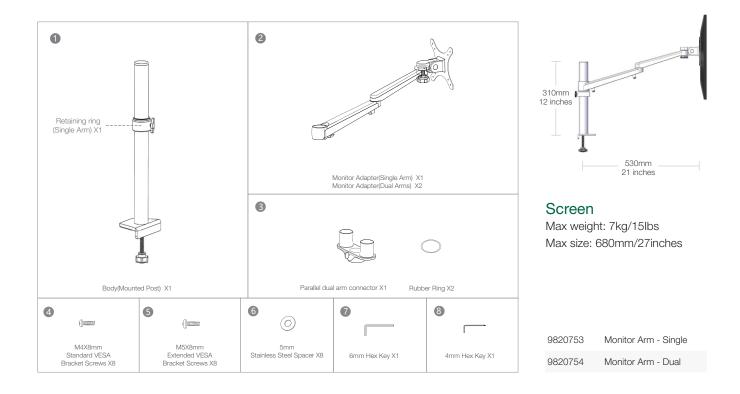

Installation instructions

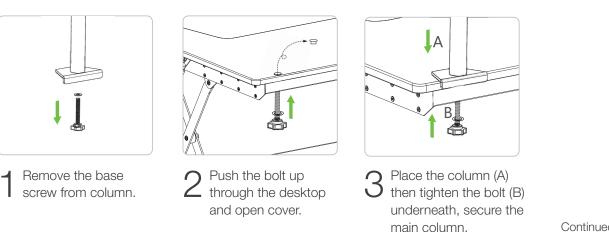

Continued overleaf...


www.PostureDepot.com




Posture Depot 179 Gasoline Alley, Ste. 203 Mooresville, NC 28117


T: 704-999-0809 E: info@posturedepot.com

Installation instructions




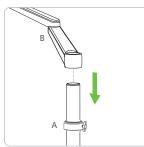

1 Slide the retaining ring (A) onto the column, then insert the double section arm (B) onto upright column.

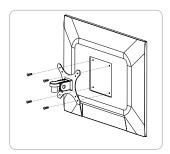


7 Place VESA bracket in position on back of the monitor with lip facing up, attach using 4 screws provided.

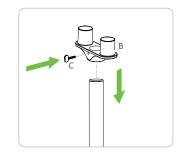

For Installation of Dual Arm

5 Insert the dual arm connector (B) into the post. Adjust the appropriate position then tighten the screw (C).

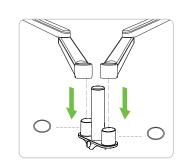



Slide the nylon washers onto the dual arm connector then position both arms onto connector.



After positioning at desired angle tighten frame with the 6mm hex key to prevent it from dropping.



9	Tiç 4n
	it f

Tighten frame with a 4mm hex key to prevent it from dropping.



Tilt adjustment +90° / -80°



Level adjustment 180°



Cantilever adjustment 360°



Height adjustment max 460mm max 18 inches

www.PostureDepot.com



Posture Depot 179 Gasoline Alley, Ste. 203 Mooresville, NC 28117

T: 704-999-0809 E: info@posturedepot.com

